

Cooking Measuring Chart



Hoop: 130mm x 180mm

Stitches: 14,507

Colors: 19

Width: 116.7mm

Length: 179.9mm

Items needed:

Fabric:

1 Piece **5½ x 8** inches Back

1 Piece **2 x 5** inches - Front

1 Piece **5½ x 6¾** inches - Front

Quilt Batting:

1 Piece **5 x 7½** inches

Wash-away Stabilizer: Large enough to hoop in the 130mm x 180mm hoop

Cord or Ribbon: **12 to 15** inches


Tape or Glue: Used for holding Fabric and Ribbon or Cord in place.

Embroidery Thread:

The thread colors depend on the color of fabric you use. You do not have to change the thread **19** times.


Color changes are to prompt your sewing machine to stop after each step.

Hoop the Stabilizer

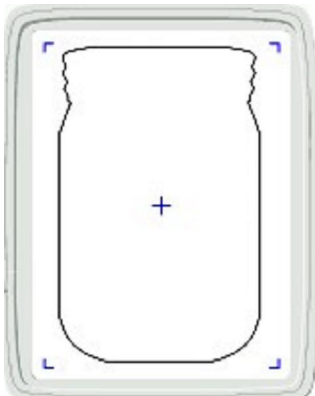

1  Sew the placement stitch. Lay the **5 x 7½** inch piece of Batting over the stitching.


2

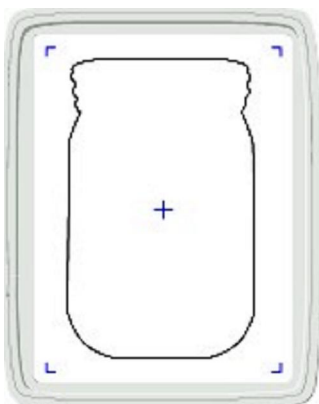

Stitch &

Trim.

3

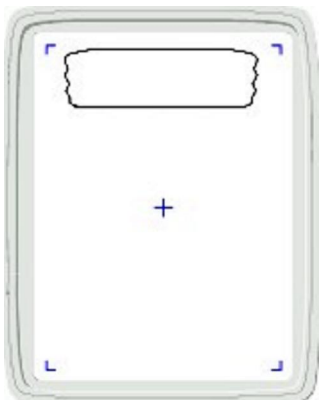

Sew the placement stitch

for the **2 x 5** inch piece of fabric. Lay the fabric over the stitching.

4

Sew. **Do Not Trim.** Lay the**5½ x 6¾** piece face down over the previously sewn piece.

5




Sew then flip down.




Smooth out and hold or tape.

6

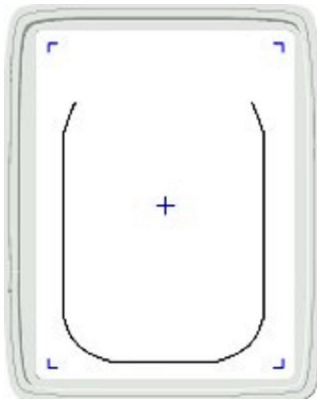

Sew

7

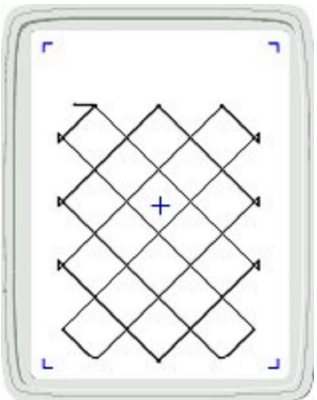

Sew the Crosshatch stitch.

8



Sew the



Double-stitch on the jar lid.

9



Sew the sizes.

10

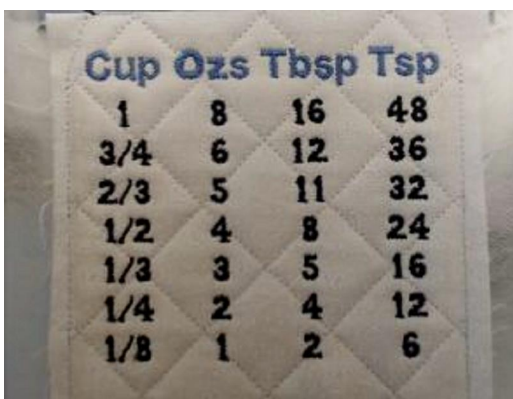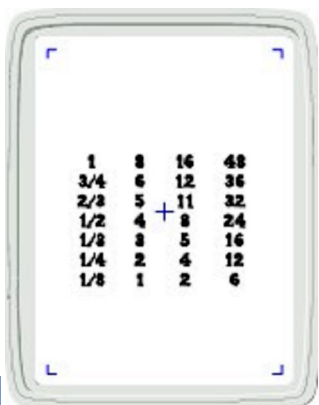

Sew the amounts.

11




12



13




14

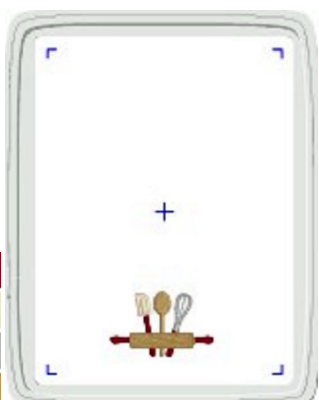


Sew the cooking

tools in your choice of colors. Remove the hoop. Turn over. Lay the Back 5½ x 8 piece of fabric face up over the back. Tape the four corners and anywhere else needed. Replace the hoop.


15

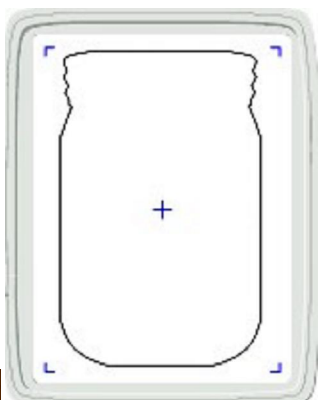

Sew.

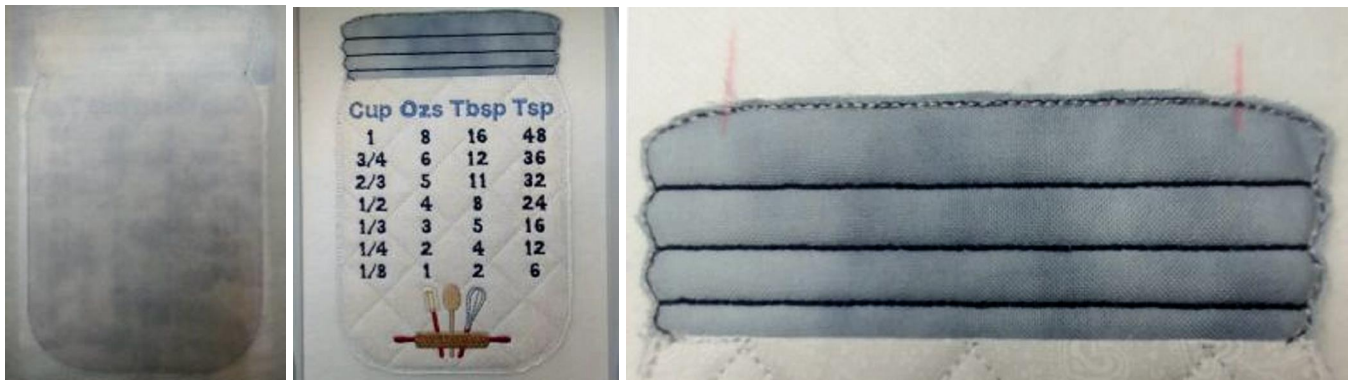


Remove the hoop. **Trim** the front and back close to the stitching. Replace the hoop. Measure in $\frac{1}{2}$ to $\frac{3}{4}$ inch from the side seam at the top and mark. Lay the ribbon or cord with the ends facing toward the top. Glue or tape to hold.

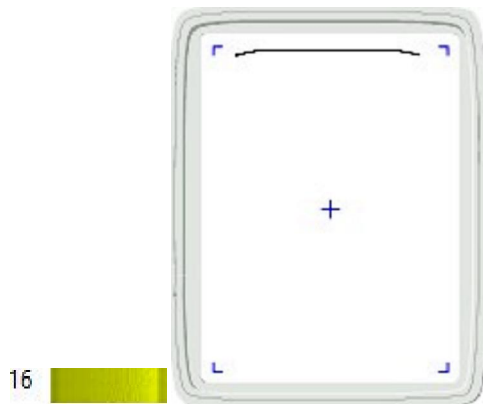


Sew.

Trim the ends, flip up, and glue or tape.

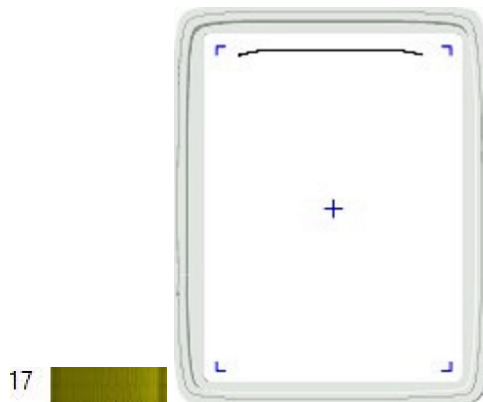


Sew

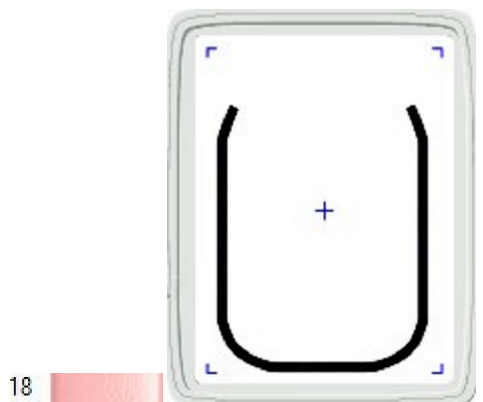

Sew the satin stitch around the jar.

19

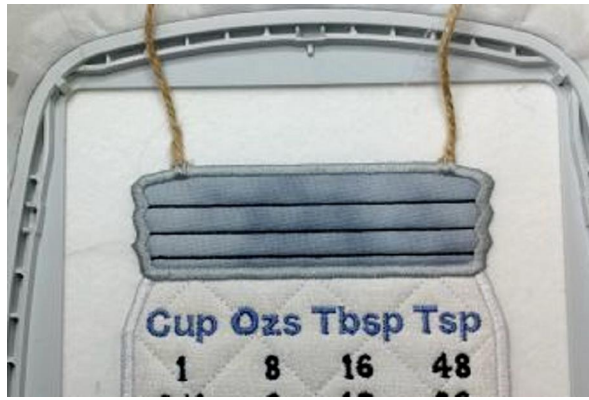

Sew the satin stitch

around the lid.

Remove the design from the hoop. **Trim** the stabilizer close to the stitches. Wet your finger and rub along the edges to remove the excess Wash-away stabilizer.

If you make it too wet, the stabilizer will cause the fabric to pucker. If that happens you will have to soak or wash it to remove it all.

